

Air Leak	Parts	Causes	Remedies	
<b>Air Cap Set (Fluid Nozzle)</b>	Air Valve Seat Set	Dirt on seat surface (inside)	Clean	
		Wear or Damage on seat surface	Replace	
		Broken (overtightened)	Replace	
	Air Valve	Dirt on seat surface	Clean	
		Damage on seat surface	Replace	
	Air Valve Spring	Weak (lack of load)	Replace	
	O-ring on Air Valve Seat Set	Missing	Replace	
		Wear or Damage	Replace	
	Fluid Nozzle	Dirt on seat surface	Wear or Damage	Replace
			Damage on seat surface	Replace
Loose		Tighten		
<b>Behind Trigger</b>	Packing inside Fluid Adj. Guide Set	Wear, Damage or Missing	Replace whole Fluid Adj. Guide Set (Packing itself is not replaceable)	
	Air Valve	Dirt on seat surface	Clean	
		Wear or Damage on seat surface	Replace	
	Air Valve Shaft	Dirt on seat surface	Clean	
		Wear or Damage on seat surface	Replace	
	Packing inside Air Valve Seat Set	Wear or Damage	Replace whole Air Valve Seat Set (Packing itself is not replaceable)	
Air Valve Seat Set	Dirt on seat surface (outside)	Clean		
	Loose	Tighten		

