

Other Problems	Parts	Causes	Remedies
Bubbling back to Cup	Air Cap Set	Loose	Tighten
	L gasket (black) on Air Cap Set	Loose or Installed incorrect	Replace
	Fluid Nozzle	Loosen	Tighten
		Paint building up on seat surface	Clean
		Damage on seat surface	Replace
	Fluid Nipple	Loosen	Tighten
Paint building up on seat surface		Clean	
Damage on seat surface		Replace	
No pattern Adjustment	Pattern Adj. Knob	Dirt on seat surface	Clean
		Wear or Damage	Replace
		Air Adj. Knob and Pattern Adj. Knob are installed incorrect	Reinstall
	L gasket (black) on Air Cap Set	Loose or Installed incorrect	Replace
	Fluid Nozzle	Damage	Replace
		Holes are clogged	Clean or Replace
Air Cap Set	Loose	Tighten	
No air adjustment	Air Adj. Knob	Holes are clogged	Clean or Replace
		Dirt on seat surface	Clean
		Wear or Damage	Replace
		Air Adj. Knob and Pattern Adj. Knob are installed incorrect	Reinstall

